



LCD and 16-Zone LED Keypads



1689
16-Zone LED Keypad



1641BL
LCD Keypad

User's Manual



Table of Contents

Introduction	1
Basic Operation	2
Keypad Indicator Lights.....	2
Visual Feedback.....	3
For the Spectra 1689 LED	
Keypad Module	3
For the Spectra 1641BL LCD	
Keypad Module	4
Auditory Feedback	4
Alarm Memory Display	5
Event List (1641BL LCD Keypad	
Modules Only)	6
Trouble Display	7
Partitioning	12
Programming Access Codes	13
System Master Code	
(Default: 123456)	13
Master Codes.....	13
Duress Code	14
Programming Access Codes.....	14
Arming & Disarming	16
Exit Delay	16
Disarming & Deactivating an Alarm	16
Regular Arming	17
Stay Arming.....	17
Instant Arming	18
Force Arming.....	19
Manual Bypass Programming	20
Bypass Recall Feature	21

One-Touch Arming.....	22
One-Touch Regular Arming	22
One-Touch Stay Arming.....	22
Fast Exit	23
One-Touch Force Arming.....	23
One-Touch Bypass Programming.....	23
Keyswitch Arming.....	24
Auto-Arming	24
Timed Auto Arming	24
No Movement Auto Arming	26
Additional Features	26
Programming Chime Zones	26
Keypad Muting	27
Panic Alarms.....	28
PGM Button	
(Programmable Outputs).....	28
Quick Function Keys	29
Test Report	29
Call PC	29
Answer PC	29
Cancel Communication	29
Programming Time and Day (clock).....	30
Keypad Settings	
(1641BL LCD Keypad Modules Only)	31
The Help Menu (1641BL LCD Keypad.....	
Modules Only)	32
Fire Alarms.....	33
Testing & Maintenance	37
System Checklist.....	38
Appendix A	44

1.0 Introduction

Thank you for selecting the Spectra Security System from Paradox Security Systems Ltd. The Spectra Security System will give you peace of mind by providing reliable security protection. Spectra can realize your dreams of home automation such as controlling garage doors, lights, heating, temperature and much more. Consult your installer to take full advantage of your Spectra system's capabilities.

This advanced technology security system provides you with reliable security protection and powerful features that anyone can use without memorizing complex and confusing codes. The system consists of the Spectra control panel, one or more Spectra keypads modules, various input devices (i.e. motion detectors, door contacts, etc.) and various output devices (i.e. bells, sirens, lights, etc.).

The elegant and user-friendly Spectra 1689 LED Keypad Modules and 1641BL LCD Keypad Modules allow you to easily access your security system's functions and provide you with an easy-to-understand display of your security system's alarm and operational status. All of the actions performed in your security system will be executed and displayed through the keypad. Therefore, before using your security system, we highly recommend that you read this manual carefully and have your installer explain basic system operation to you.

2.0 Basic Operation

The Spectra 1689 LED and 1641BL LCD Keypad Modules function in the same way, but display visual feedback differently. This section will provide an overview of the keypads.



Many of the features in your system must be enabled by the installer. If the feature is not programmed, the keypad will emit a rejection beep and the action will be cancelled. Refer to *System Checklist* on page 38 for details.

2.1 Keypad Indicator Lights

The state of each light on the Spectra keypad modules represents a specific condition in your system as shown in Figure 1.

Figure 1: Overview of Indicator Lights

AC Light:

ON = AC power is present
OFF = Power failure


STATUS Light:

When Green:

ON = All zones closed
OFF = Zone(s) open
FLASH = During Exit Delay

When Red (LCD keypads only):

ON = System armed
SLOW FLASH = Stay armed
FAST FLASH = Alarm

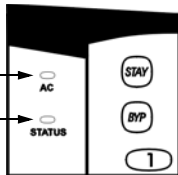

2.2 Visual Feedback

2.2.1 For the Spectra 1689 LED Keypad Module

The numbers and symbols on the keypad's screen communicate your system's status as shown in Figure 2.

Figure 2: Overview of the 1689 LED Keypad Module

Arm Lights (red):
(for Regular and Force arming)

Arm 1 for Partition 1

Arm 2 for Partition 2

ON = Partition armed

OFF = Partition disarmed

FLASH = Partition in alarm

Stay Lights (red):
(for Stay and Instant arming)

Stay 1 for Partition 1


Stay 2 for Partition 2

ON = Partition armed

OFF = Partition disarmed

Zone Display:


The numbers [1] to [16] correspond to zones 1 to 16 respectively. When illuminated, zones are open or breached.

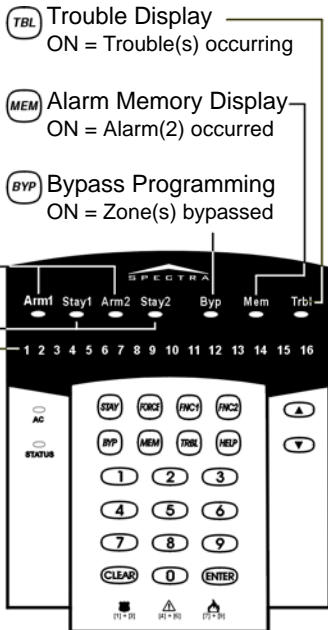

2.2.2 For the Spectra 1641BL LCD Keypad Module

The LCD (liquid crystal display) is a 32-character screen that displays messages that can be customized to your needs.

Figure 3: Overview of the 1641BL LCD Keypad Module

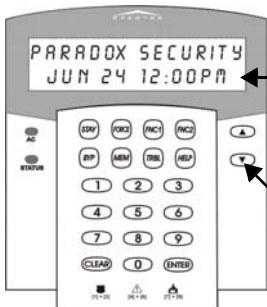

The messages on the LCD screen will display the system's status and guide you through the system's operations.

When arrows appear in the LCD screen, use the arrow buttons to scroll through the menu.

2.3 Auditory Feedback


When you enter information on the keypad, it will guide you with beep tones. You should be familiar with these:

Confirmation Beep: When an operation (i.e. arming/disarming) is successfully entered on the keypad or when the system switches to a new status/mode, the keypad produces an intermittent beep tone ("BEEP-BEEP-BEEP-BEEP").

Rejection Beep: When the system reverts to previous status or when an operation is incorrectly entered on the keypad, it will emit a continuous beep tone ("BEEEEEEEEEP").

2.4 Alarm Memory Display

All zones where alarms have occurred will be stored in memory. The system will erase the contents of the Alarm Memory every time the system is armed.

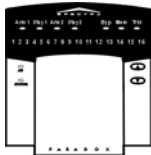

For Spectra 1689 LED Keypad Modules:

If an alarm has occurred on a zone, the **[MEM]** symbol will illuminate. After disarming the system, press the **[MEM]** key to illuminate the number symbols corresponding to the zones that were in alarm. To exit the Alarm Memory Display, press the **[CLEAR]** key.



For Spectra 1641BL LCD Keypad Modules:

If an alarm has occurred on a zone, "Zone(s) in Memory **[MEM]** to view" will appear on the LCD screen. After disarming the system, press the **[MEM]** key. Use the **[▲]** or **[▼]** keys to view the zones that were in alarm. To exit the Alarm Memory Display, press the **[CLEAR]** key.

2.5 Event List (1641BL LCD Keypad Modules Only)


The Event List will record all the actions that occur in the system.

How do I view the Event List?

1. Press the **[MEM]** key.
2. Press the **[FNC2]** key.
3. Use the **[▲]** or **[▼]** keys to view the Event Screens.
4. Press **[CLEAR]** twice to exit.

Each event that occurs generates two Event Screens (see Figure 4). Once you enter the Event List, the time and the day the event occurred and what event occurred will scroll on the screen. As you press the **[▼]** key, the next pair will scroll.

Figure 4: Example of Event Screens

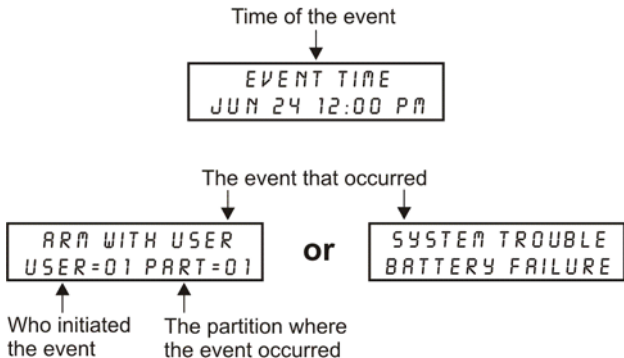

2.6 Trouble Display


Your alarm system continuously monitors fourteen possible trouble conditions. Most of these trouble conditions can be reported directly to your monitoring station.



We strongly suggest that you inform your monitoring station of the trouble and allow them to service your system.



The keypad can be programmed to emit a BEEP every 5 seconds whenever a new trouble condition has occurred. Press the **[TRBL]** key to stop the “Trouble BEEP”.

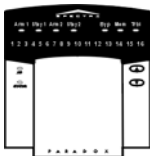

For Spectra 1689 LED Keypad Module:

When a trouble condition occurs, the **[TRBL]** symbol will illuminate.

How do I access the Trouble Display?

1. Press the **[TRBL]** key.
*The **[TRBL]** symbol will flash and number(s) corresponding to the trouble(s) will illuminate.*
2. Read the corresponding explanation of the trouble from the *Trouble List* on page 8. If no repair instructions are given, call your monitoring station for repairs.
3. Press the **[CLEAR]** key to exit.



For Spectra 1641BL LCD Keypad Module:
When a trouble condition occurs, “System Trouble [TRBL] to View” will appear on the screen.

How do I access the Trouble Display?

1. Press the **[TRBL]** key.
“Trouble View System Trouble” will appear on the screen.
2. Use the **[▲]** or **[▼]** keys to view the Trouble(s). Read the corresponding explanation from the Trouble List. If no repair instructions are given, call your monitoring station for repairs.
3. Press the **[CLEAR]** key to exit.

Trouble List

After you press the **[TRBL]** key:

- On the 1689 LED Keypad Module, the numbers **[1]** to **[16]** will illuminate for the corresponding trouble(s).
- On the 1641BL LCD Keypad Module, the heading(s) will appear on the screen.

[1] No or Low Battery Trouble

The backup battery is disconnected or the battery voltage is getting low.

[2] Wireless Transmitter Battery Low

The battery voltage in one or more Wireless Transmitters is

getting low. Also, the device's yellow light will flash.

[3] Power Failure

The system has detected a loss of AC power. This trouble usually occurs during a power failure. If a power failure is not occurring in your establishment and this trouble appears, contact your monitoring station for service.

[4] Bell/PGM2 Disconnected Trouble

Any device connected to the Bell or PGM2 output is no longer connected to your alarm system.

[5] Bell Current Failure

During an alarm, the bell output, which uses a fuseless circuit, will automatically shut down if the current exceeds a predetermined value. When the system is disarmed, the current is cut from the bell output and the Trouble warning may extinguish, but the Trouble may re-occur during the next alarm if the situation is not corrected.

[6] Auxiliary Current Failure


The auxiliary output, which supplies power to your alarm system's accessories, uses a fuseless circuit to protect the power supply against current overload and automatically shuts down if the current exceeds a predetermined value.

[7] Communication Failure

Your alarm system, if monitored, could not communicate with the monitoring station.

[8] Timer Loss

Your alarm system's clock must be reprogrammed. **This is the only trouble that we recommend that you correct.**

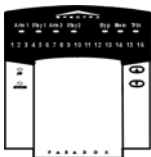

For Spectra 1689 LED Keypad Module:

How do I reprogram the clock?

1. Perform steps 1 and 2 from *How do I access the Trouble Display?* on page 7.
2. Press the **[8]** key.
3. Enter the desired **[TIME]** using the 24Hr clock. (i.e. 6:15 p.m. = 18:15)

For the 1689 LED Keypad Module also refer to *Appendix A* on page 44.



For Spectra 1641BL LCD Keypad Module:

How do I reprogram the clock?

1. Perform steps 1 and 2 from *How do I access the Trouble Display?* on page 8.
2. Press the **[8]** key.
3. Enter the desired **[TIME]**.
 - A. If the keypad is configured for International time, enter the time using the 24Hr clock (6:15 p.m. = 18:15). Proceed to step 5.
 - B. If the keypad is configured for U.S. time, enter the time using the 12Hr clock. Proceed to step 4.

4. After entering the time (step 3B) press the **[1]** key to set the time in a.m. or the **[2]** key to set the time in p.m. for the U.S. time format.
5. Enter the date in the YYYY/MM/DD format. The information will be saved automatically.



If the time on your keypad is displayed with a.m. or p.m., your keypad is configured with the U.S. time format.

[9] Tamper/Zone Wiring Failure

A wiring problem is occurring on one or more zones.

To view which zones are experiencing trouble, press the **[9]** key after step 2 from the Trouble Display (see *How do I access the Trouble Display?* on page 7 or page 8).

[10] Telephone Line Monitoring Failure

The system has not detected the presence of a telephone line for more than 30 seconds.

[11] Fire Zone Trouble

A wiring problem on the fire zone is occurring.

[12] Module Loss

A module is no longer communicating with your system.

[13] Wireless Transmitter Supervision Loss

A wireless transmitter is no longer communicating with its receiver or its batteries are disconnected.

To view on which zones the Wireless Transmitters are experiencing trouble, press the **[MEM]** key after step 2 from the Trouble Display (see *How do I access the Trouble Display?* on page 7 or page 8).

[16] Keypad Fault

If for any reason your keypad is no longer communicating with your alarm system, the keypad will emit four consecutive beeps at 3-second intervals. Press any key on the keypad to terminate the “beeping” sequence. When communication is restored, the keypad will resume its functions.

2.7 Partitioning

Your Spectra system is equipped with a partitioning feature that can divide your alarm system into two distinct areas identified as Partition 1 and Partition 2. Partitioning can be used in installations where shared security systems are more practical, such as a home office or warehouse building. When partitioned, each zone, each user code and many of your system's features can be assigned to either Partition 1, Partition 2, or both partitions.



If the system is not partitioned, all zones, user codes, and features will be recognized as belonging to Partition 1.

3.0 Programming Access Codes

Access codes are personal identification numbers that allow you to enter certain programming modes, arm or disarm your system as well as activate or deactivate PGMs.

The Spectra security system supports the following:

- 1 System Master Code
- 2 Master Codes
- 45 User Access Codes (including 1 Duress code)

For information on how each access code can arm or disarm the system refer to the *System Checklist* on page 38.

3.1 System Master Code (Default: 123456)

The System Master Code can arm or disarm any partition using any of the methods described in this section and can create, modify or delete any user access code (see *Programming Access Codes* on page 14).



Do not delete the System Master Code in section [001]. If you do, the System Master Code will be lost, you will not be able to re-program it and your system will have to be serviced by a technician.

3.2 Master Codes

Master Code 1 is permanently assigned to Partition 1 and can be used to create, modify or delete user access codes (see *Programming Access Codes* on page 14) that are assigned to Partition 1.

Master Code 2 is permanently assigned to Partition 2 (except when partitioning is disabled, Master Code 2 will be assigned to Partition 1) and can be used to create, modify or delete user access codes (see section 3.4) that are assigned to the same partition.



Master Codes cannot modify or delete user access codes assigned to both partitions. Only the System Master Code can modify or delete user access codes assigned to both partitions.

3.3 Duress Code

If you are forced to arm or disarm your system, entering the access code assigned to User 048 will arm or disarm the system and immediately transmit a silent alert (Duress Code) to the monitoring station.



Must be enabled by your installer.

3.4 Programming Access Codes

Your system can use either 4- or 6-digit access codes (see page 39), where each digit can be any value from 0 to 9. Six-digit codes are considered more difficult to “crack” and therefore, more secure. Avoid programming simple or obvious access codes, such as your telephone number, address or codes such as 1234.

How do I program Access Codes?

1. Press the **[ENTER]** key.
2. Enter your **[MASTER CODE]**.
3. Enter 3-digit **[SECTION]** (see Table 1 below).
4. Enter a new 4- or 6-digit **[ACCESS CODE]**.
5. Press the **[CLEAR]** key to exit.

How do I delete Access Codes?

1. Repeat steps 1 to 3 (see above).
2. Press the **[FORCE]** key once for each digit in the access code (4 or 6 times) until the keypad emits a confirmation beep then press the **[CLEAR]** key to exit.



Do not delete the System Master Code. Refer to the warning in section 3.1 on page 13 for more information.

For the 1689 LED Keypad Module also refer to *Appendix A* on page 44.

Table 1: User Code Sections

Section	User Codes
[001]	User Code 001 = System Master Code
[002]	User Code 002 = Master Code 1
[003]	User Code 003 = Master Code 2
[004] to [047]	User Code 004 to User Code 047
[048]	User Code 048 or Duress Code

4.0 Arming & Disarming

Take full advantage of your Spectra system by familiarizing yourself with all the arming methods.



If your system is not partitioned (section 2.7 on page 12), everything is considered as belonging to Partition 1.

4.1 Exit Delay

After entering a valid arming sequence, an Exit Delay Timer will provide you with enough time to exit the protected area before the system arms. The keypad may beep during the Exit Delay.

4.2 Disarming & Deactivating an Alarm

To disarm an armed system or an alarm, enter your access code. An entry point, like the front door, will be programmed with one of two Entry Delay Timers. When an entry point is opened, the keypad will beep until you disarm the system. Your alarm system will not generate an alarm until this timer elapses. Any user can disarm a partition they have been assigned to, except users assigned with the Arm Only Option. To disarm alarms generated by a Delayed Fire Zone, please refer to *Fire Alarms* on page 33.

How do I deactivate an alarm?

Enter your **[ACCESS CODE]**.

How do I disarm the system?

For a Stay or Instant armed system, go to step 2.

1. Enter through a designated entry point (i.e. front door).
2. Enter your **[ACCESS CODE]**.

If you have access to both partitions (section 2.7 on page 12):

3. Press the key corresponding to the desired partition (**[1]** or **[2]**). For both partitions, press the other key after the confirmation beep.

4.3 Regular Arming

This method will arm all the zones in the selected partition.

How do I Regular arm?

1. Close all zones in the desired partition.
2. Enter your **[ACCESS CODE]**.

If you have access to both partitions (section 2.7 on page 12):

3. Press the key corresponding to the desired partition (**[1]** or **[2]**). For both partitions, press the other key after the confirmation beep.

Please note that Regular arming can also be activated using Auto-Arming (section 4.9 on page 24), a keyswitch (section 4.8 on page 24), or One-Touch arming (section 4.7 on page 22).

4.4 Stay Arming

This method allows you to remain in the protected area while partially arming the system. Stay zones are zones that are

bypassed when Stay arming. For example, when you go to sleep at night, doors and windows can be armed without arming other zones like motion detectors.

How do I Stay arm?

1. Close all zones in the desired partition (except Stay zones).
2. Press the **[STAY]** key.
3. Enter your **[ACCESS CODE]**.

If you have access to both partitions (section 2.7 on page 12):

4. Press the key corresponding to the desired partition, **[1]** or **[2]**. For both partitions, press the other key after the confirmation beep.

Stay arming can also be activated using Auto-Arming (section 4.9 on page 24), a keyswitch (section 4.8 on page 24) or One-Touch arming (section 4.7 on page 22).

4.4.1 Instant Arming

After Stay arming the system and during its Exit Delay, press and hold the **[STAY]** key for 3 seconds. You should hear a confirmation beep. The system is then Instant armed.

Therefore, any armed zone that is breached will immediately generate an alarm.

If you have access to both partitions:

To Instant arm one partition:

1. Press the **[STAY]** key.
2. Enter your **[ACCESS CODE]**.
3. Choose a partition.
4. Press and hold the **[STAY]** key for 3 seconds.

To Instant arm both partitions:

1. Press the **[STAY]** key.
2. Enter your **[ACCESS CODE]**.
3. Press the **[1]** key.
4. Press **[2]**.
5. Press and hold the **[STAY]** key for 3 seconds.

4.5 Force Arming

Force arming allows you to rapidly arm the system without waiting for all zones in the system to close. During Force arming, a Force zone is considered “deactivated” until it closes, then the system will arm that zone. Force arming is commonly used when a motion detector is protecting the area occupied by a keypad. For example, when arming and the motion detector is a Force zone, the system will allow you to arm even if the zone is open.

How do I Force arm?

1. Close zones in the desired partition (except Force zones).
2. Press the **[FORCE]** key.
3. Enter your **[ACCESS CODE]**.


If you have access to both partitions (section 2.7 on page 12):

4. Press the key corresponding to the desired partition, **[1]** or **[2]**. For both partitions, press the other key after the confirmation beep.

Force arming can also be activated by using One-Touch Force arming (section 4.7.4 on page 23).

4.6 Manual Bypass Programming

Manual Bypass Programming allows you to program the alarm system to ignore (deactivate) specified zones the next time the system is armed. For example, you may wish to bypass certain zones when workers are renovating part of your establishment. Once the system is disarmed, the bypass entries are erased.

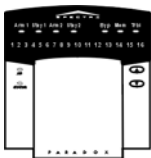

For Spectra 1689 LED Keypad Modules:

When zones are bypassed, the **[BYP]** symbol will illuminate.

How do I bypass zones?

1. Press the **[BYP]** key.
2. Enter your **[ACCESS CODE]** (see the note on page 21).
3. Illuminate the number(s) corresponding to the zone(s) you want to bypass by entering the two-digit zone number (i.e. zone 3 = 03).
4. Press the **[ENTER]** key to save and exit.

Manual Bypass Programming can also be activated by using One-Touch Bypass Programming (section 4.7.5 on page 23). To remove the Bypass feature from a zone, in step 3 enter the zone number again or press **[FORCE]** to erase all current entries.



For Spectra 1641BL LCD Keypad Modules:

When zones are bypassed, “Zone(s) Bypassed **[BYP]** to View” will appear on the screen.

How do I bypass zones?

1. Press the **[BYP]** key.
2. Enter your **[ACCESS CODE]** (see note below).
3. Enter the two-digit zone number of the desired zone (i.e. zone 3 = 03) or use the **[▲]** or **[▼]** keys to view the zones and press the **[BYP]** key when the desired zone appears on the screen.
4. Press the **[ENTER]** key to exit.

To remove the Bypass feature from a zone, in step 3 re-enter the two-digit zone number of the desired zone or press the **[BYP]** key when the bypassed zone appears on the screen.



If you have access to both partitions, press the key corresponding to the desired partition, **[1]** or **[2]**.

4.6.1 Bypass Recall Feature

After disarming the system, the bypass entries are erased. The Bypass Recall feature reinstates the previous bypass

entries saved in memory. This eliminates the need to manually re-program the bypass entries every time you arm the system.

How do I recall bypass entries?

5. Press the **[BYP]** key.
6. Enter your **[ACCESS CODE]** (see the note on page 21).
7. Press the **[BYP]** key.
8. Press the **[ENTER]** key.

4.7 One-Touch Arming

One-Touch arming allows you to arm the system without using an access code.

4.7.1 One-Touch Regular Arming

Press and hold the **[ENTER]** key for 3 seconds (see the note on page 21) to arm all zones in the partition. You can use this feature to allow specific individuals like service personnel (i.e. cleaners) to arm without giving them access to any other alarm system operations. For details on Regular arming, refer to section 4.3 on page 17.

4.7.2 One-Touch Stay Arming

Press and hold the **[STAY]** key for 3 seconds (see the note on page 21) to arm all zones not defined as Stay zones. For details on Stay arming, refer to section 4.4 on page 17.

4.7.3 Fast Exit

When the system is already Stay armed: This feature will allow you to exit already armed premises and keep the system armed.

Exit and Stay Arm: Press and hold the **[STAY]** key for 3 seconds (see the note on page 21) to start the Exit Delay (see page 16). After the Exit Delay has elapsed, the system will return to Stay arming.

Exit and Regular Arm: Press and hold the **[ENTER]** key for 3 seconds (see the note on page 21) to start the Exit Delay (see page 16). After the Exit Delay has elapsed, the system will switch to Regular arming (see page 17).

Exit and Force Arm: Press and hold the **[FORCE]** key for 3 seconds (see the note on page 21) to start the Exit Delay (see page 16). After the Exit Delay has elapsed, the system will switch to Force arming (see page 19).

4.7.4 One-Touch Force Arming

Press and hold the **[FORCE]** key for 3 seconds (see the note on page 21) to bypass any open Force zones. For details on Force arming, refer to section 4.5 on page 19.

4.7.5 One-Touch Bypass Programming

Press and hold the **[BYP]** key for 3 seconds (see the note on page 21) to access Bypass Programming Mode (section 4.6 on page 20).

4.8 Keyswitch Arming

A keyswitch can be used to arm and disarm the system. A keyswitch is programmed to Stay arm (section 4.4 on page 17) or Regular arm (section 4.3 on page 17) and is assigned to a specific partition. A keyswitch can function as a Maintained or Momentary keyswitch.

To arm the system using a Maintained keyswitch, set the keyswitch to the ON position. To disarm the system set the keyswitch to the OFF position.


To arm the system using a Momentary keyswitch, set the keyswitch to the ON position then turn it back to the OFF position. Repeating this sequence will disarm the system.

4.9 Auto-Arming

The Spectra alarm system can be programmed to automatically arm upon the following two conditions.

4.9.1 Timed Auto Arming

You can program the time your alarm system will automatically arm itself everyday.

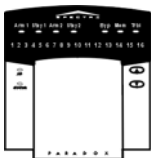

For Spectra 1689 LED Keypad Modules:

How do I program the Auto-Arm Timer?

1. Press the **[ENTER]** key.
2. Enter **[MASTER CODE]**.
3. Enter **[101]** for Partition 1 or **[102]** for Partition 2.

4. Enter the desired **[TIME]** using the 24Hr clock (i.e. 6:15 p.m. = 18:15).

For the 1689 LED Keypad Module also refer to *Appendix A* on page 44.



For Spectra 1641BL LCD Keypad Modules:

How do I program the Auto-Arm Timer?

1. Press the **[ENTER]** key.
2. Enter **[MASTER CODE]**.
3. Enter **[101]** for Partition 1 or **[102]** for Partition 2.
4. Enter the desired **[TIME]**.
 - A. If the keypad is configured for International time, enter the time using the 24Hr clock (i.e. 6:15 p.m. = 18:15).
 - B. If the keypad is configured for U.S. time, enter the time using the 12Hr clock.
Proceed to step 5.
5. After entering the time (step 4B) press the **[1]** key to set the time in a.m. or the **[2]** key to set the time in p.m. for the U.S. time format.



If the time on your keypad is displayed with a.m. or p.m., your keypad is configured for the U.S. time format.



A 60-second Exit Delay (section 4.1 on page 16) will start before the system arms. At this point, Auto-Arming can be cancelled by entering your access code.

4.9.2 No Movement Auto Arming

Your panel can be programmed to arm the system and/or send a report if no zone activity occurs for a pre-programmed amount of time. This is a particularly useful feature when supervising an individual with chronic health problems or a person who lives alone.


5.0 Additional Features



Each keypad must be Chimed and Muted separately. Chime Zones and Keypad Muting must be re-programmed if your system suffers a total power loss.

5.1 Programming Chime Zones

A Chime Enabled zone will advise you every time it is opened by causing your keypad to beep.

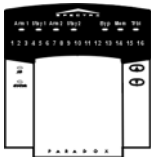

For Spectra 1689 LED Keypad Modules:

How do I chime zones?

1. Press & hold the **[9]** key for 3 seconds.
2. Illuminate the numbers corresponding to the zones you want to Chime by entering the two-digit zone number. For example, to chime zone 2 enter **[0]** then **[2]**. The keypad will automatically save once the 2-digit zone number is entered.
3. Press the **[ENTER]** key to exit.

To remove the Chime feature from a zone, in step 2 enter the

zone number again so the number extinguishes or press **[FORCE]** to remove Chiming from all zones programmed to Chime. When you program Chime Zones, once you press and hold the **[9]** key, the **[ARM1]**, **[STAY1]**, **[ARM2]**, **[STAY2]**, **[BYP]**, **[MEM]**, and **[TRBL]** symbols will flash. Any zones that are already Chimed will also illuminate. Zones that remain off or extinguished are not Chimed.



For Spectra 1641BL LCD Keypad Modules:

How do I chime zones?

1. Press & hold the **[9]** key for 3 seconds.
2. Enter the two-digit zone number of the desired zone or use the **[▲]** or **[▼]** keys to view the zones and press the **[FNC1]** key when the desired zone appears on the screen. The keypad will automatically save once the 2-digit number is entered.
3. Press the **[CLEAR]** key to exit.

To remove the Chime feature from a zone, in step 3 re-enter the two-digit zone number of the desired zone (i.e. to remove Chime from zone 2, enter **[0]** then **[2]**) or press the **[FNC1]** key when the chimed zone appears on the screen.

5.2 Keypad Muting

When muted, the keypad will only emit the confirmation beep, rejection beep, and beep when a key is pressed. Therefore, when muted, the keypad will not beep during an alarm. Press

and hold the **[CLEAR]** key for 3 seconds to enable or disable Keypad Muting. If the keypad emits a confirmation beep, Keypad Muting is enabled for that keypad. If the keypad emits a rejection beep, the feature is disabled.

5.3 Panic Alarms

In case of an emergency, the Spectra system can provide three panic alarms that can immediately generate an alarm after simultaneously pressing and holding two specific keys for three seconds. Based on your needs, these panic alarms can generate audible alarms (sirens or bells) or silent alarms and can communicate specific messages to your monitoring station. For instance, pressing **[1]** and **[3]** can mean “call the police” or anything you require.

Press and hold keys **[1]** and **[3]** for the police.

Press and hold keys **[4]** and **[6]** for a medical alarm.

Press and hold keys **[7]** and **[9]** for a fire alarm.

5.4 PGM Button (Programmable Outputs)

Your Spectra system may include one or more programmable outputs (PGMs). When a specific event or condition occurs in the system, the PGM can be used to reset smoke detectors, activate light switches in your home or office, open/close garage doors and much more. A PGM can also be programmed to activate whenever the **[FNC1]** key is pressed and held for 3 seconds.

5.5 Quick Function Keys

Upon request of your installer or monitoring station you may have to perform one of the following. Press:

5.5.1 Test Report

[ENTER] + [MASTER CODE] + [MEM]

If your system is monitored by your monitoring station, this feature will send a test report code to the monitoring station.

5.5.2 Call PC

[ENTER] + [MASTER CODE] + [BYP]

Will initiate a call to the monitoring station that is using the WinLoad software.

5.5.3 Answer PC

[ENTER] + [MASTER CODE] + [FORCE]


Will force your security system to answer a call made by your monitoring station that is using the WinLoad software.

5.5.4 Cancel Communication

[ENTER] + [MASTER CODE] + [STAY]

Cancels all communication with the WinLoad software if it has been initiated.

5.6 Programming Time and Day (clock)

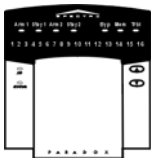

For Spectra 1689 LED Keypad Modules:

How do I program the System Clock?

1. Press the **[ENTER]** key.
2. Enter **[MASTER CODE]** and enter **[100]**.
3. Enter the time using the 24Hr clock (i.e. 6:15 p.m. = 18:15).
4. Press the **[CLEAR]** key.

For the 1689 LED Keypad Module also refer to *Appendix A* on page 44.



For Spectra 1641BL LCD Keypad Modules:

How do I program the System Clock?

1. Press the **[ENTER]** key.
2. Enter **[MASTER CODE]**.
3. Enter **[100]**.
4. Enter the desired **[TIME]**.
 - A. If the keypad is configured for International time, enter the time using the 24Hr clock (i.e. 6:15 p.m. = 18:15). Proceed to step 6.
 - B. If the keypad is configured for U.S. time, enter the time using the 12Hr clock. Proceed to step 5.
5. After entering the time (step 4B) press the **[1]** key to set the time in a.m. or the **[2]** key to set the time in p.m. for the U.S. time format.

6. Enter the date in the YYYY/MM/DD format. The information will be saved automatically.



If the time on your keypad is displayed with a.m. or p.m., your keypad is configured with the U.S. time format.

5.7 Keypad Settings (1641BL LCD Keypad Modules Only)

You can modify the keypad's setting to suit your needs.

How do I modify my keypad's settings?

1. Press and hold the **[6]** key for 3 seconds.
2. Choose one. Press:
 - [1]** Backlight*: the keypad's light (7 is the brightest)
 - [2]** Contrast: character intensity (7 is the lightest)
 - [3]** Scroll: time between messages (7 is slowest)
3. Press the **[▲]** or **[▼]** keys to modify your keypad's settings.
4. Press the **[ENTER]** key to save.
5. Return to step 2 to modify another setting or press the **[CLEAR]** key to exit.

***Note:** When the system is in Confidential Mode or during a power failure, the intensity of the keypad's backlight automatically decreases to a Level 1 setting. During this time, if a key is pressed on the keypad, the backlight switches to regular intensity.

5.8 The Help Menu (1641BL LCD Keypad Modules Only)

The 1641BL LCD Keypad module comes with a Help menu that is divided into two sections which the installer can use to enter information about your system: Zone Info and Notes. The Notes section contains general notes, messages or important information such as emergency numbers and tips. The Zone Info section contains general zone information.

How do I access the Help menu?

1. Press the **[HELP]** key.
2. Press the **[1]** key to access Zone Info or press the **[2]** key to access Notes.
3. Press the **[▲]** or **[▼]** keys to scroll through the programmed notes or information.
4. Press the **[CLEAR]** key to exit.

6.0 Fire Alarms


Upon a fire alarm, the bell/siren will emit three “squawks” at 2 second intervals until silenced or reset by entering a valid access code. If the zone is a Delayed Fire Zone, there is a delay before the system contacts the monitoring station. This will prevent unnecessary reporting of false alarms. If there is no fire condition, contact your monitoring station immediately to avoid an unnecessary response.

What do I do if a delayed fire zone was set off accidentally?

1. Press the **[CLEAR]** key within 30 seconds of the alarm.
2. Try to correct the problem.
3. If the problem persists, the alarm will sound again. Press the **[CLEAR]** key again.

These steps will instruct the system to delay reporting the fire alarm to the monitoring station (see Figure 5 on page 34).

Figure 5: Delayed Fire Zone Event Sequence

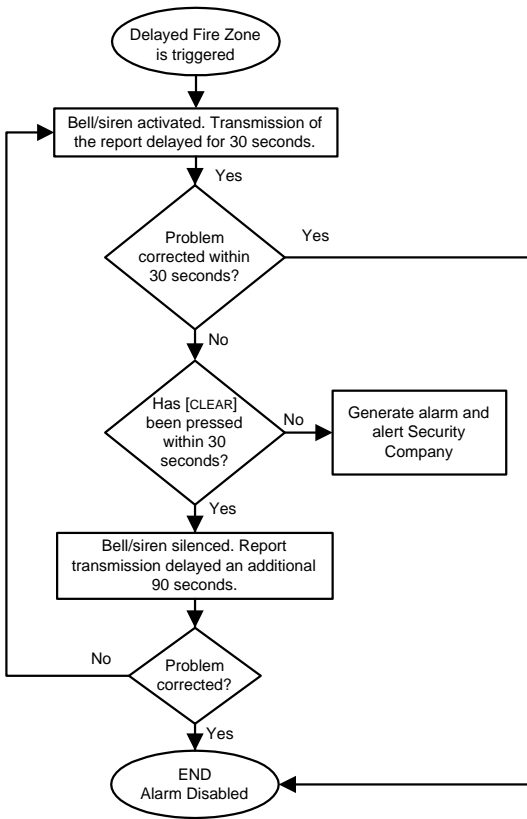

Minimizing Fire Hazards

The three most common causes of fires:

- Cooking is the leading cause of home fires in the U.S. It's also the leading cause of fire injuries. Cooking fires often result from unattended cooking and human error, rather than mechanical failure of stoves or ovens.
- Careless smoking is the leading cause of fire deaths. Smoke detectors and smolder-resistant bedding and upholstered furniture are significant fire deterrents.
- Heating is the second leading cause of residential fires. However, heating fires are a larger problem in single family homes than in apartments since the heating systems in single family homes are often not professionally maintained.

Fire Safety Tips

- In the event of a fire, escape first, then call for help. Develop a home fire escape plan and designate a meeting place outside. Make sure everyone in the family knows two ways to escape from every room. Practice feeling your way out with your eyes closed. Never stand up in a fire, always crawl low under the smoke and try to keep your mouth covered. Never return to a burning building for any reason; it may cost you your life.
- Finally, having at least one working smoke alarm dramatically increases your chances of surviving a fire. And remember to practice a home escape plan frequently with your family.

Providing a Fire Warning System

Household fires are especially dangerous at night. Fires produce smoke and deadly gases that can overcome occupants while they sleep. To warn against fire, smoke detectors should be installed outside each separate sleeping area in the immediate vicinity of the bedrooms and on each additional story of the family living unit, including basements.

7.0 Testing & Maintenance

With the system disarmed and the “READY” light ON, activate motion detectors by walking in the protected area. Open and close protected doors and verify that the corresponding key illuminates. Your installer can advise you of the best way to test your particular system.

Do not use open flame or burning materials to test your fire detection devices. Contact your installer for safe methods of testing your system.

Under normal use, your system requires virtually no maintenance other than regular testing. It is recommended that the standby battery be changed every three years. Speak to your installer about the necessary tests and at what frequency they should be performed.

8.0 System Checklist

Zone Description

Is this system partitioned? Yes No

Partition 1 = _____

Partition 2 = _____

Zone # and Description	Partition 1 or 2	Byp	Stay	Force	24Hr	Entry Delay
01: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
02: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Keyswitch? Y <input type="checkbox"/> N <input type="checkbox"/>	_____					
Type: _____						
03: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Fire Zone? Y <input type="checkbox"/> N <input type="checkbox"/>	_____					
Delayed? Y <input type="checkbox"/> N <input type="checkbox"/>						
04: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
05: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
07: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
08: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
09: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Zone # and Description	Partition 1 or 2	Byp	Stay	Force	24Hr	Entry Delay
11: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
16: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Access Codes

For security reasons, write only the user's name and not his or her access code. 4-Digit Codes 6-Digit Codes

User # and Name	Partition 1 or 2	Byp	Stay	Force	Arm Only	PGM Only
001: _____ System Master Code Default: 123456	1 & 2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
002: _____ Master Code 1	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
003: _____ Master Code 2	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
004: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
005: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

User # and Name	Partition 1 or 2	Byp	Stay	Force	Arm Only	PGM Only
006: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
007: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
008: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
009: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
010: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
011: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
012: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
013: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
014: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
015: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
016: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
017: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
018: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
019: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
020: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
021: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
022: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
023: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
024: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
025: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

User # and Name	Partition 1 or 2	Byp	Stay	Force	Arm Only	PGM Only
026: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
027: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
028: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
029: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
030: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
031: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
032: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
033: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
034: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
035: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
036: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
037: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
038: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
039: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
040: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
041: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
042: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
043: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
044: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
045: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

User # and Name	Partition 1 or 2	Byp	Stay	Force	Arm Only	PGM Only
046: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
047: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
048: _____	_____	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Duress: Y <input type="checkbox"/> N <input type="checkbox"/> _____						

Special Keys and Features

- [ENTER]** One-Touch Regular arming is activated
- [STAY]** One-Touch Stay arming is activated
- [FORCE]** One-Touch Force arming is activated
- [BYP]** One-Touch Manual Bypass Programming is activated

Panic Alarms:

- [1] & [3] Police or _____ Silent Audible Off
- [4] & [6] Aux. or _____ Silent Audible Off
- [7] & [9] Fire or _____ Silent Audible Off

PGMs:

PGM 1: _____

PGM 2: _____

PGM 3: _____

System Timers

Enter and exit your premises through the designated doors.

Exit Delay 1 (Partition 1): _____ sec. = time to exit site

Exit Delay 2 (Partition 2): _____ sec. = time to exit site

Entry Delay 1 = _____ sec. = time to disarm before alarm;
enter through zone # _____

Entry Delay 2 = _____ sec. = time to disarm before alarm;
enter through zone # _____

Alarm will activate siren or bell for _____ min.

Other Information

Installed by: _____ Date: _____

Serviced by: _____ Tel: _____


Monitored by: _____ Tel: _____

Your account number: _____

Alarm transformer location: _____ on
circuit #: _____

Location of Telephone Connections:

9.0 Appendix A

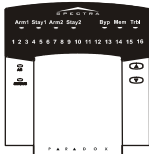

For Spectra 1689 LED Keypad Modules only

Do not read the following if you have not read these sections:

- *User Access Codes* (see section 3.4 on page 14).
- *System's Clock* (see section 5.6 on page 30).
- *Auto-Arm Time* (section 4.9 on page 24).

After entering the 3-digit section you wish to program, the **[ARM1]** and **[STAY1]** will flash. If a value is programmed, the number corresponding to the first digit of the programmed value will also illuminate. At this point, you can begin entering the required data. After entering a digit, the number corresponding to the following programmed digit will illuminate and so forth. For example, if you wish to change User Code 004 from 123456 to 454545, after entering section **[004]**, number **[1]** will turn on. Press the **[4]** key and number **[2]** will turn on, then press the **[5]** key and number **[3]** will turn on.

OR

After entering the desired 3-digit section and before entering any data, press the **[ENTER]** key to access the Data Display Mode. The **[ARM1]** and **[STAY1]** Lights will illuminate. Once in the Data Display Mode, pressing the **[ENTER]** key will scroll through the digits of the current section and the **[BYP]**, **[MEM]** & **[TRBL]** Lights will flash. When viewing the last digit in the section, pressing the **[ENTER]** key will automatically advance to the next section. Press **[CLEAR]** to exit.

Warranty

Paradox Security Systems Ltd. ("Seller") warrants its products to be free from defects in materials and workmanship under normal use for a period of one year. Except as specifically stated herein, all express or implied warranties whatsoever, statutory or otherwise, including without limitation, any implied warranty of merchantability and fitness for a particular purpose, are expressly excluded. Because Seller does not install or connect the products and because the products may be used in conjunction with products not manufactured by Seller, Seller cannot guarantee the performance of the security system and shall not be responsible for circumstances resulting from the product's inability to operate. Seller obligation and liability under this warranty is expressly limited to repairing or replacing, at Seller's option, any product not meeting the specifications. Returns must include proof of purchase and be within the warranty period. In no event shall the Seller be liable to the buyer or any other person for any loss or damages whether direct or indirect or consequential or incidental, including without limitation, any damages for lost profits stolen goods, or claims by any other party, caused by defective goods or otherwise arising from the improper, incorrect or otherwise faulty installation or use of the merchandise sold.

Notwithstanding the preceding paragraph, the Seller's maximum liability will be strictly limited to the purchase price of the defective product. Your use of this product signifies your acceptance of this warranty.

BEWARE: Dealers, installers and/or others selling the product are not authorized to modify this warranty or make additional warranties that are binding on the Seller.

Limitations of Alarm Systems

It must be understood that while your Paradox alarm system is highly advanced and secure, it does not offer any guaranteed protection against burglary, fire or other emergency (fire and emergency options are only available on certain Paradox models). This is due to a number of reasons, including but not limited to inadequate or improper installation/positioning, sensor limitations, battery performance, wireless signal interruption, inadequate maintenance or the potential for the system or telephone lines to be compromised or circumvented. As a result, Paradox does not represent that the alarm system will prevent personal injury or property damage, or in all cases provide adequate warning or protection.

Your security system should therefore be considered as one of many tools available to reduce risk and/or damage of burglary, fire or other emergencies, such other tools include but are not limited to insurance coverage, fire prevention and extinguish devices, and sprinkler systems.

We also strongly recommend that you regularly maintain your security systems and stay aware of new and improved Paradox products and developments.

Warning for Connections to Non-Traditional Telephony (eg. VoIP)

Paradox alarm equipment was designed to work effectively around traditional telephone systems. For those customers who are using a Paradox alarm panel connected to a non-traditional telephone system, such as "Voice Over Internet Protocol" (VoIP) that converts the voice signal from your telephone to a digital signal traveling over the Internet, you should be aware that your alarm system may not function as effectively as with traditional telephone systems.

For example, if your VoIP equipment has no battery back-up, during a power failure your system's ability to transmit signals to the central station may be compromised. Or, if your VoIP connection becomes disabled, your telephone line monitoring feature may also be compromised. Other concerns would include, without limitation, Internet connection failures which may be more frequent than regular telephone line outages.

We therefore strongly recommend that you discuss these and other limitations involved with operating an alarm system on a VoIP or other non-traditional telephone system with your installation company. They should be able to offer or recommend measures to reduce the risks involved and give you a better understanding.

© 2001-2007 Paradox Security Systems Ltd. All rights reserved. Specifications may change without prior notice. One or more of the following U.S. patents may apply: 6215399, 6111256, 5751803, 5721542, 5287111, 5119069, 5077549, 5920259 and 5886632. Canadian and international patents may also apply.

Spectra and WinLoad are trademarks or registered trademarks of Paradox Security Systems Ltd. or its affiliates in Canada, the United States and/or other countries.



Printed in Canada - 02/2007

SPEK-EU07